


Wiring a electronic ballast

Wiring diagram for a single ballast

If the casing is plastic you do not need to connect the green Earth wire


The green wire is **NOT** a Earth wire on the output side of the ballast

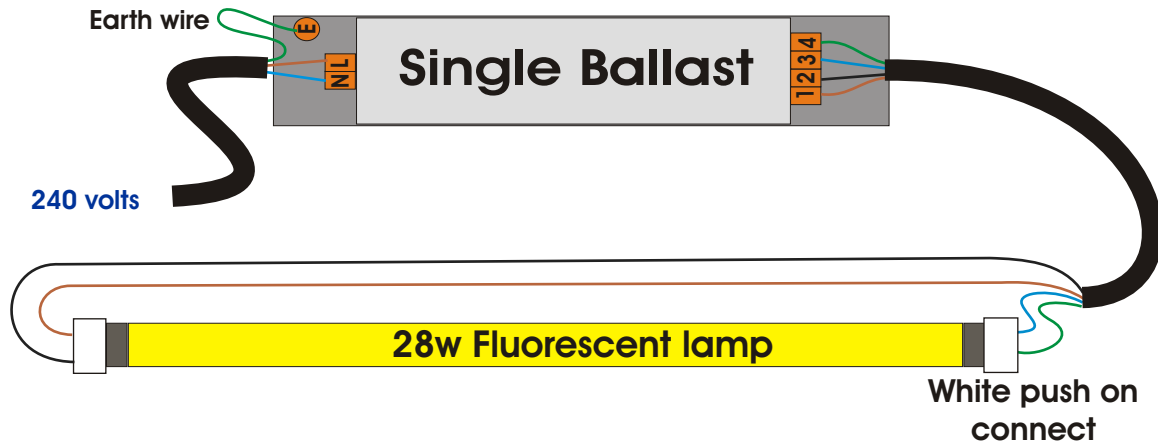

Wiring diagram for a twin ballast

240 volts

Connect the two green wires together

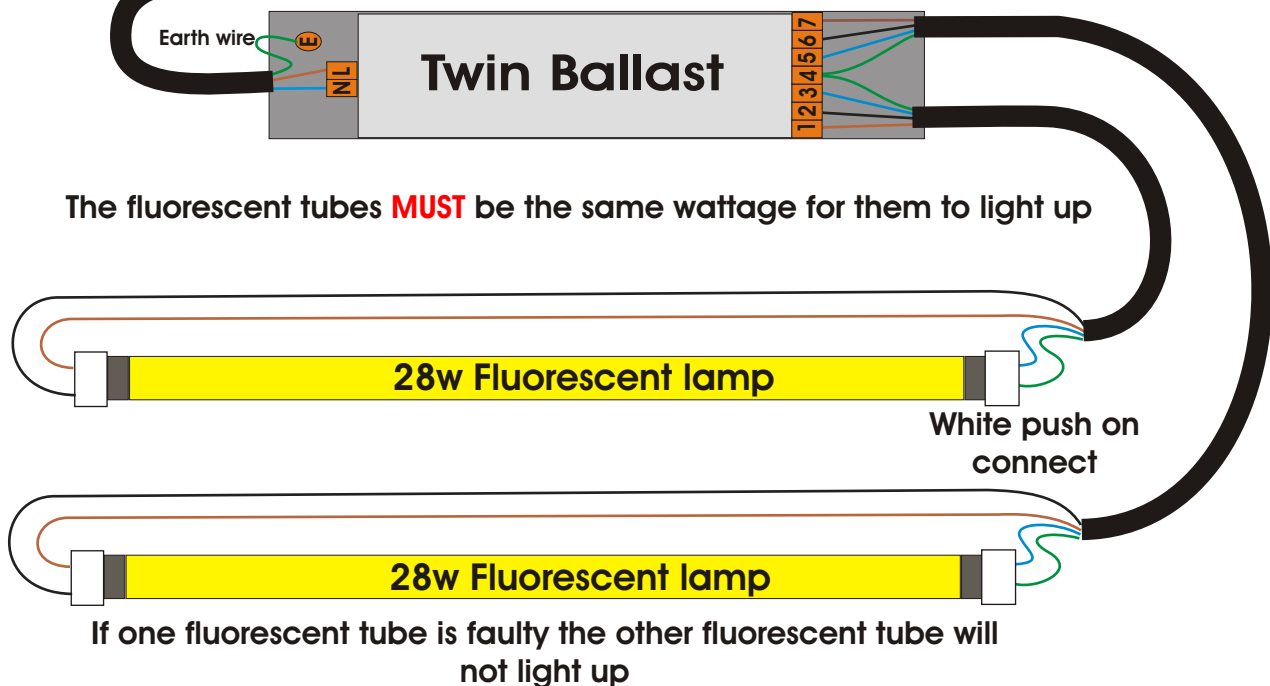

The fluorescent tubes **MUST** be the same wattage for them to light up

If one fluorescent tube is faulty the other fluorescent tube will not light up