


Wiring a electronic ballast

Wiring diagram for a single ballast

If the casing is plastic you do not need to connect the green Earth wire

The green wire is **NOT** a Earth wire on the output side of the ballast

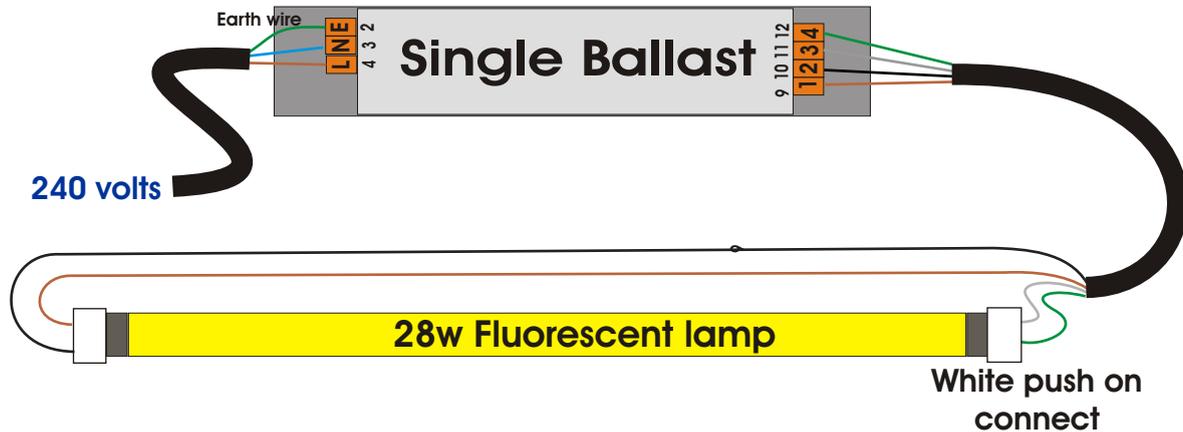

Wiring diagram for a twin ballast

240 volts

Connect the two green wires together

